

AUTO-BLiP

INTELLIGENT DOWNSHIFTS

www.AUTO-BLiP.com

For cars not equipped with a clutch* pedal position switch:

A **clutch pedal position switch** will be required to activate the Auto-Blip when the clutch pedal is depressed. Some non-US or custom builds may not come equipped with one.

In the event that your car does not come with this switch, a simple mechanical on/off switch can be added to the clutch pedal that will be triggered when the pedal is depressed:

- Once installed, all you have to do is connect one side of the switch to ground and the other side to the AUTO-BLiP yellow wire.
- Testing: We recommend the use of a voltage meter to verify that the clutch pedal signal is working. You are looking for a voltage signal that changes every time the pedal is depressed.

*** Also applies to Brake pedal signal**