

AUTO-BLIP

INTELLIGENT DOWNSHIFTS

www.AUTO-BLiP.com

For cars without a clutch and/or a brake pedal position switch:

Both a **BRAKE** and a **CLUTCH pedal position switches** are required to request the 'blip' from the Auto-Blip unit. This system will wait for the brake and clutch pedals to be depressed in that order before sending the 'blip'.

Some foreign or custom builds may not come equipped with these pedal position switches. If that is the case, a switch will have to be installed on each pedal. This switch will need to trigger a signal when the respective pedal is depressed.

- **Testing:** We recommend the use of a voltage meter to verify that the installed switches are properly working. You are looking for a voltage signal (12v +/-) that drops to zero (+/-) when the pedal is depressed.