


**How to use Posi-Tap connectors  
supplied with Auto-BLiP systems**

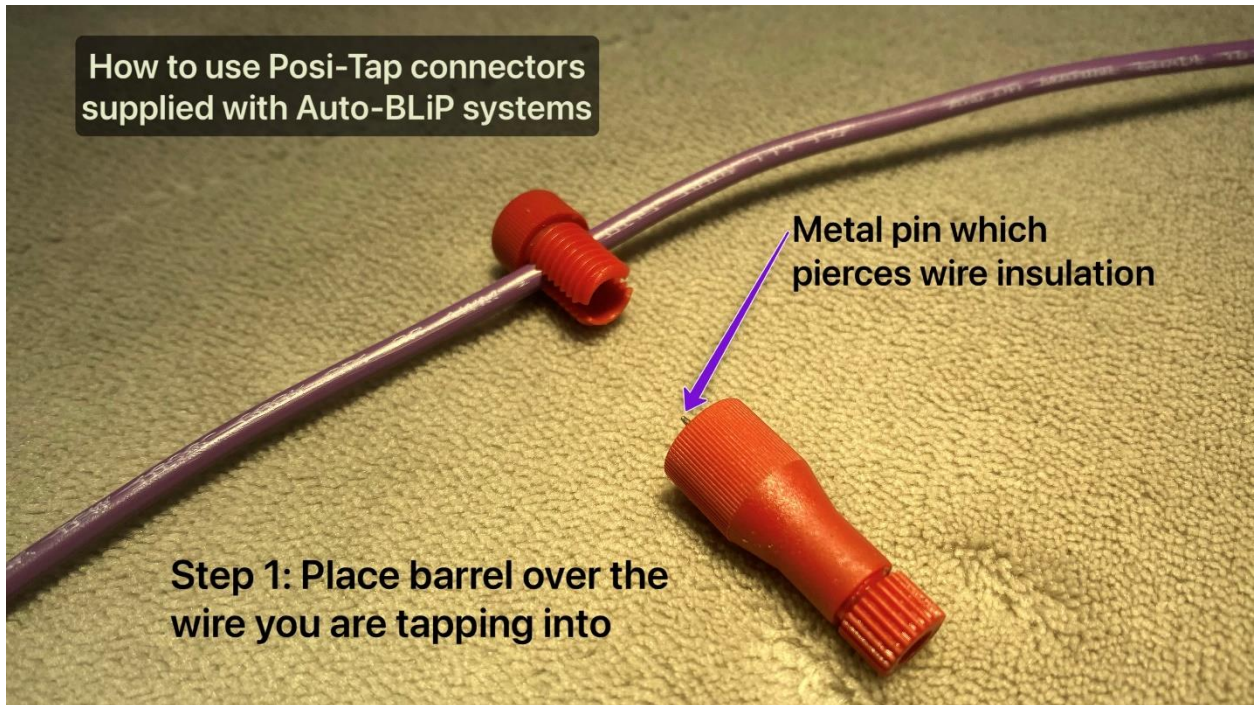

**Metal pin which  
pierces wire insulation**

**Step 1: Place barrel over the  
wire you are tapping into**



**Step 2: Firmly screw  
main barrel together.**

