



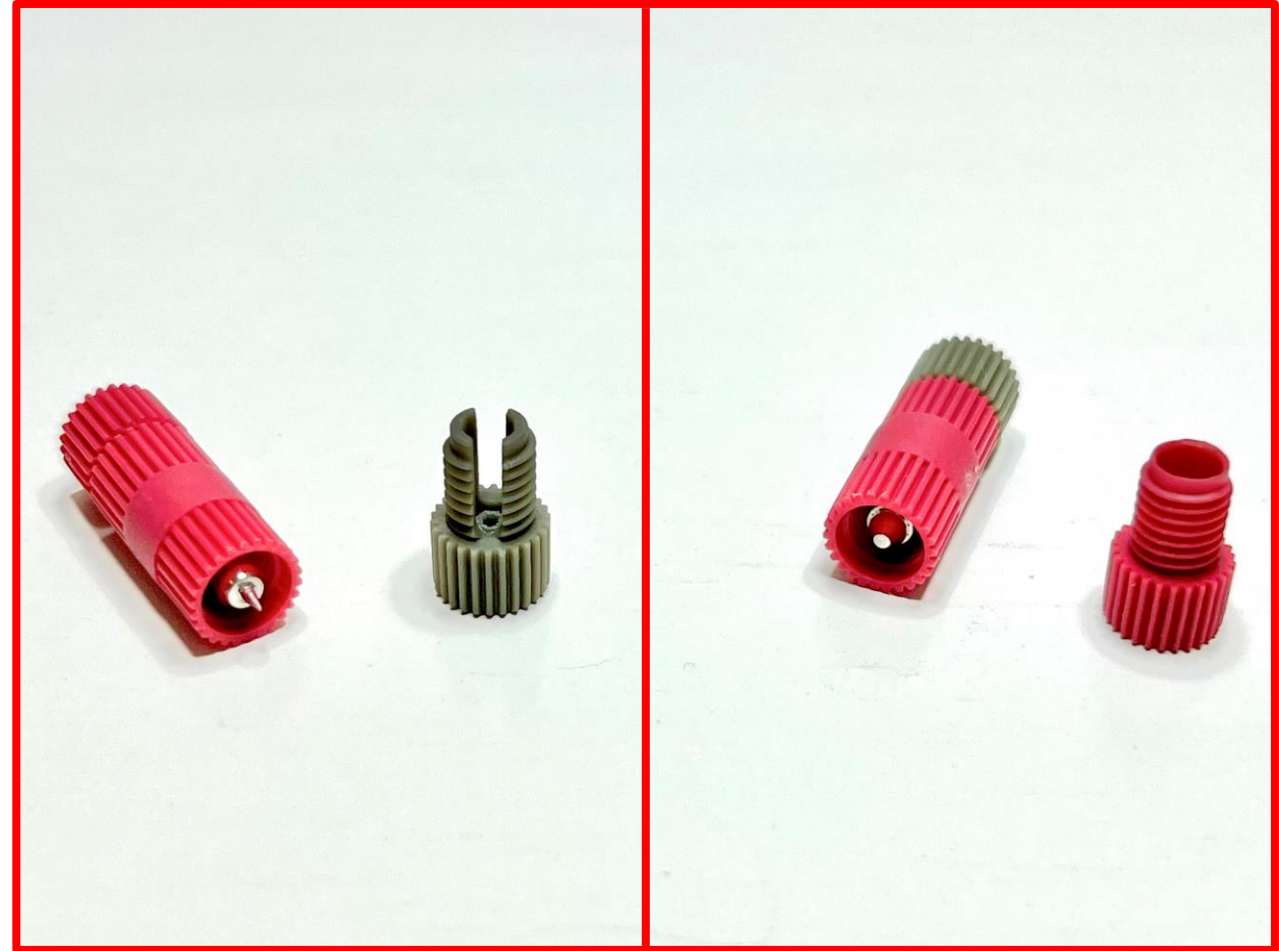


## Posi-Tap Installation Guide for connecting to car 20-22 gage wires

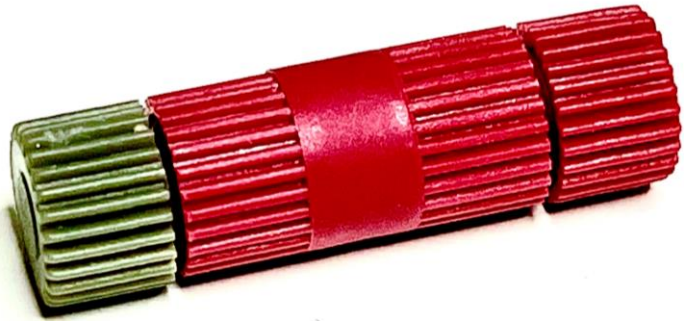


**Please place extra attention to tapping/connecting Auto-Blip harness wires to car circuit wires. Most installation failures are due to poor connections. Please follow instructions to ensure a successful installation. Continuity test recommended. Perform calibration process once you complete installation, and before you attempt to use Auto-Blip.**

Posi-tap endcap for tapping into car circuit wires

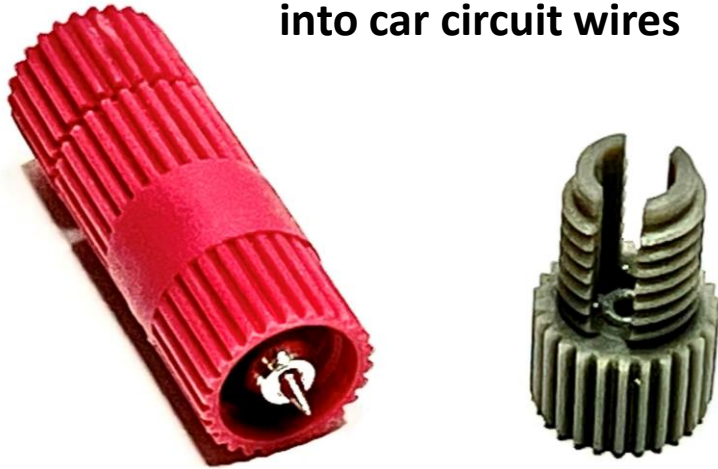

## Step 1

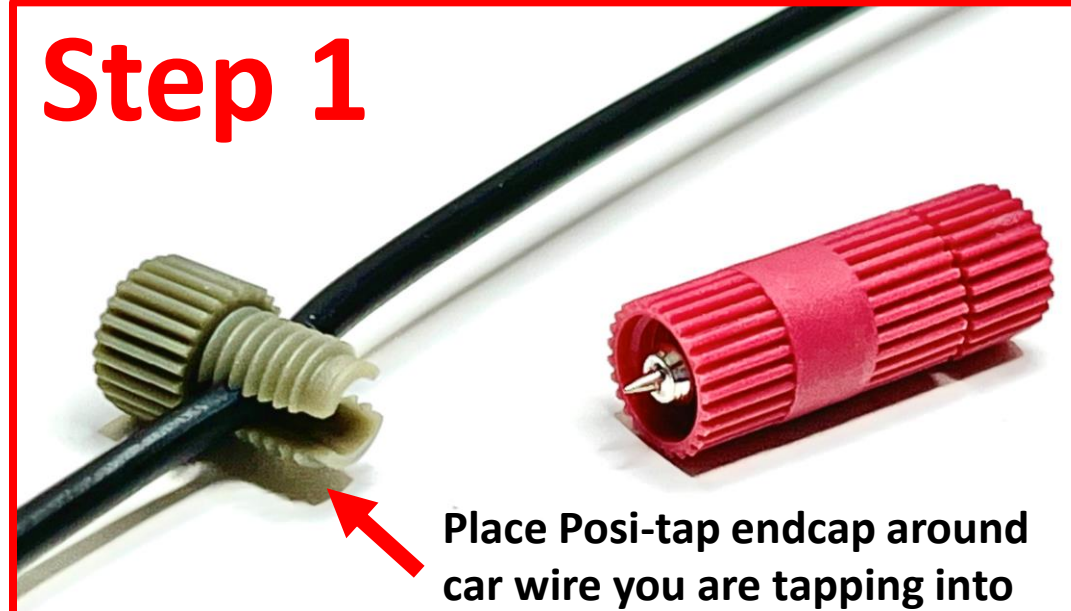

Place Posi-tap endcap around car wire you are tapping into


**Attention! You must ensure needle on Step 1 pierces car wire vinyl to make solid contact. Tap designed for 20-22 gage wire, thinner wire may fail. Continuity test recommended!**

## Step 2




Firmly screw endcap into main barrel. Keep straight to ensure good contact.

Posi-tap endcap for connecting  
AB harness wire to car circuit

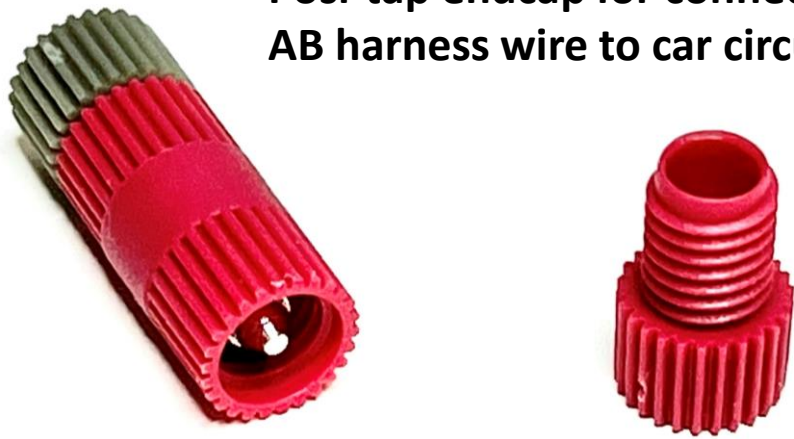

# Step 1

AB harness wire you are  
connecting to car circuit

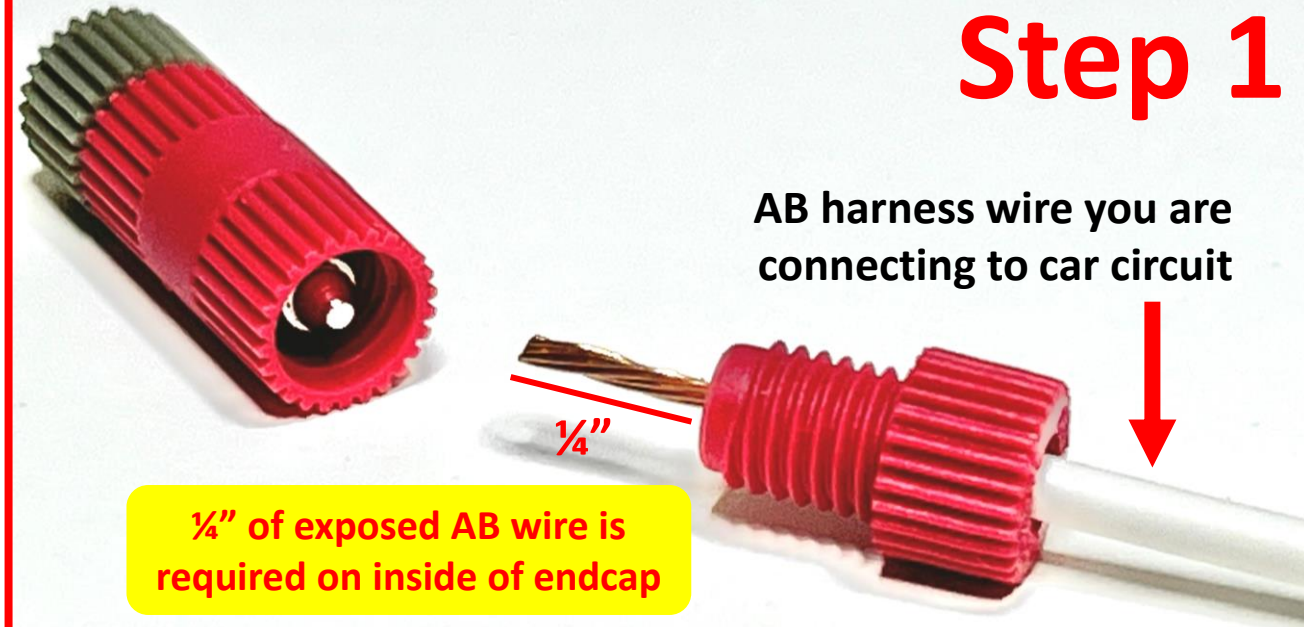

# Step 2

For optimum contact must insert  $\frac{1}{4}$ " AB  
wire into barrel alongside metal cylinder



# Step 3

Firmly screw endcap to main barrel; keep wire in contact  
with metal cylinder inside barrel; keep endcap straight!



# Installed Posi-Tap

