



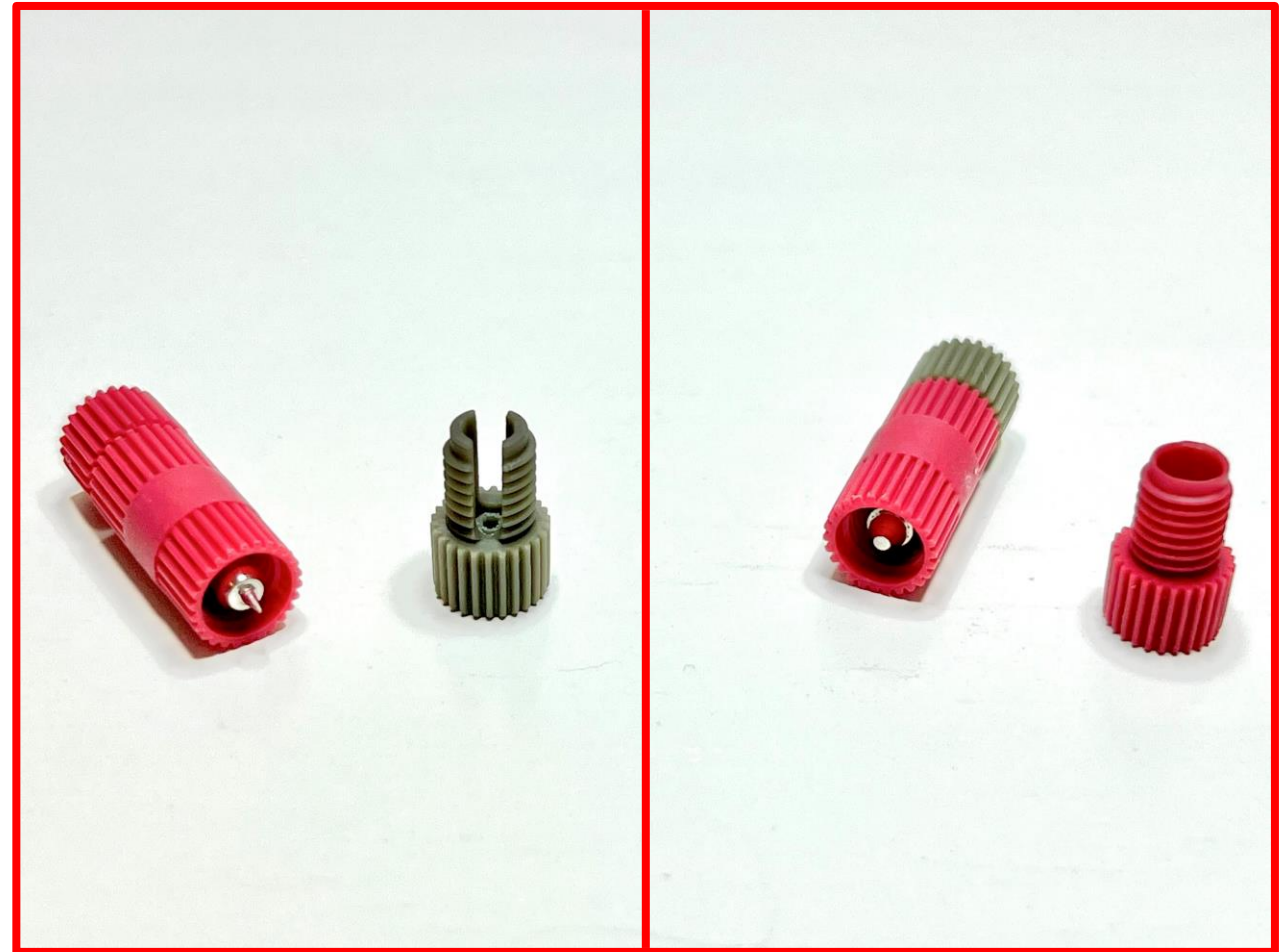


Posi-Tap Installation Guide for connecting to car 20-22 gage wires

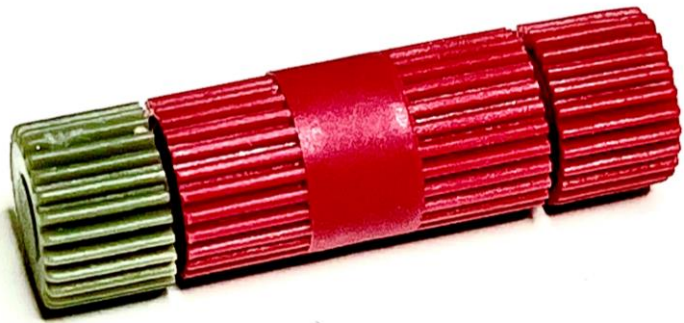


Please place extra attention to tapping/connecting Auto-Blip harness wires to car circuit wires. Most installation failures are due to poor connections. Please follow instructions to ensure a successful installation. Continuity test recommended. Perform calibration process once you complete installation, and before you attempt to use Auto-Blip.

Step 1 - Posi-tap endcap (grey) is for tapping into car circuit wires. Must be connected to car wire prior to connecting to Auto-Blip's harness.

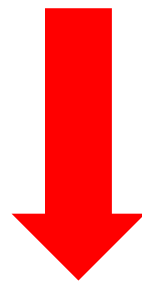

Attention! You must ensure needle on Step 1 pierces car wire vinyl through the center of the wire in order to make proper contact. Tap designed for 20-22 gage wire, thinner wire may fail. Continuity test recommended!

Step 1

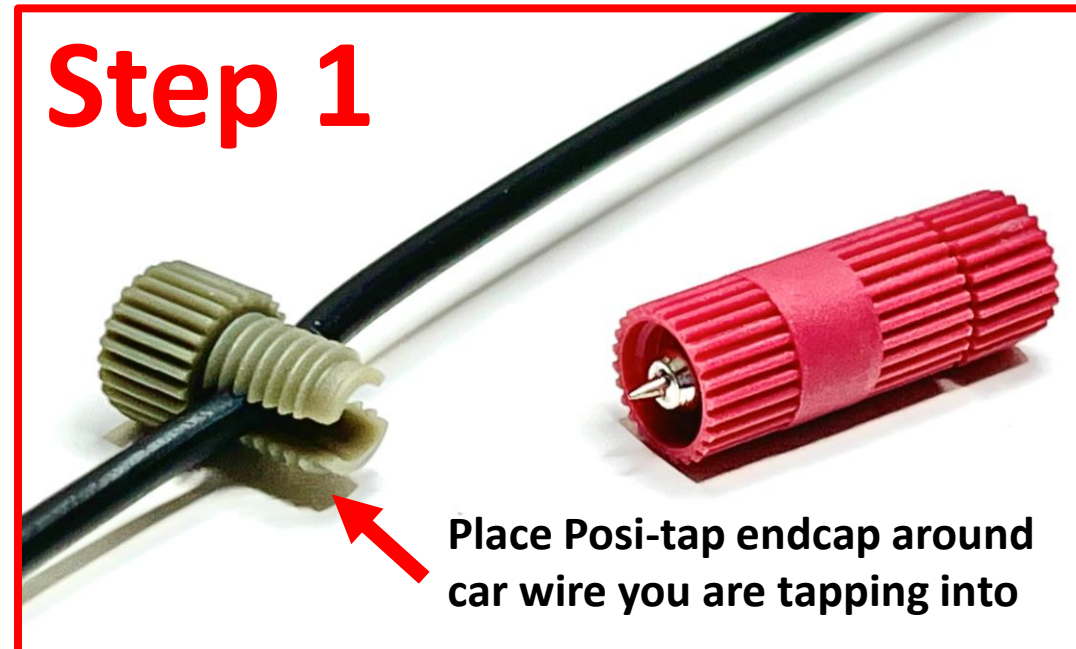


Place Posi-tap endcap around car wire you are tapping into

Step 2




Firmly screw endcap into main barrel. Keep straight to ensure good contact.

Posi-tap endcap for connecting
AB harness wire to car circuit

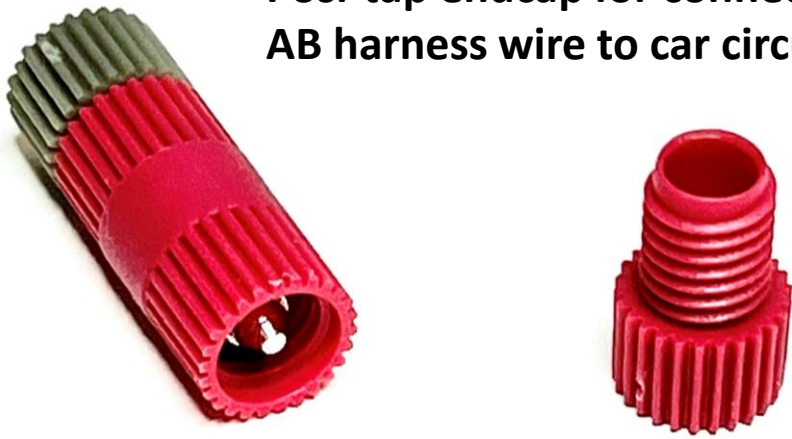

Step 1

AB harness wire you are
connecting to car circuit

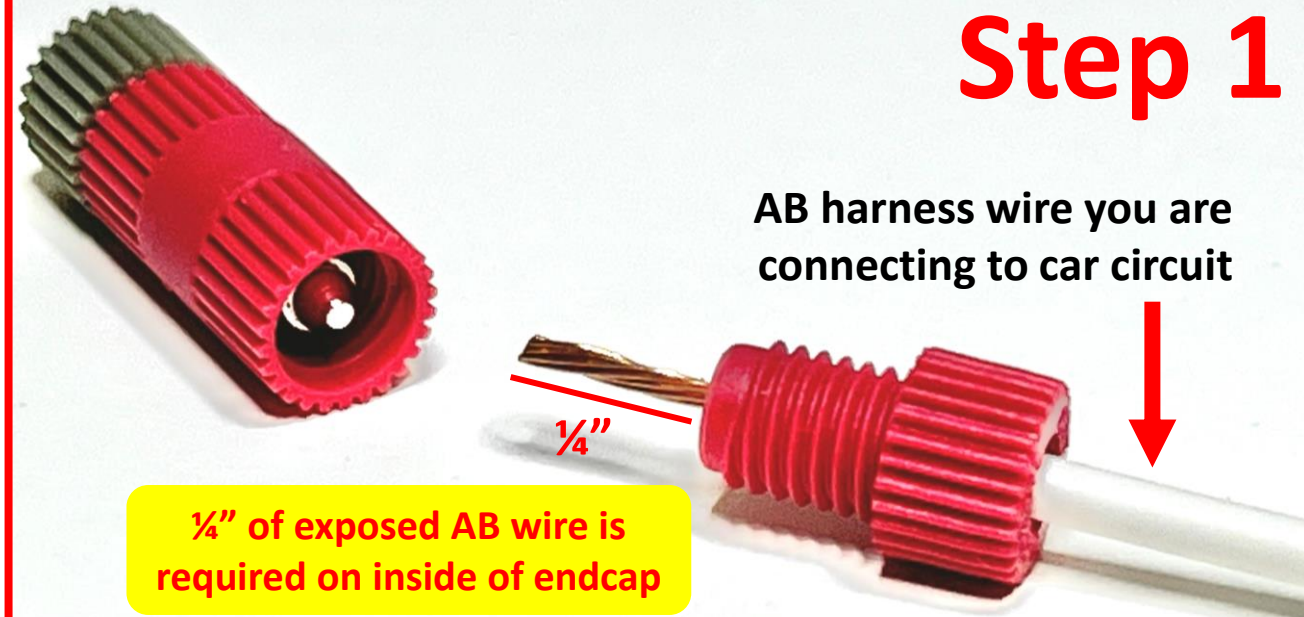

Step 2

For optimum contact must insert $\frac{1}{4}$ " AB
wire into barrel alongside metal cylinder



Step 3

Firmly screw endcap to main barrel; keep wire in contact
with metal cylinder inside barrel; keep endcap straight!



Installed Posi-Tap

