




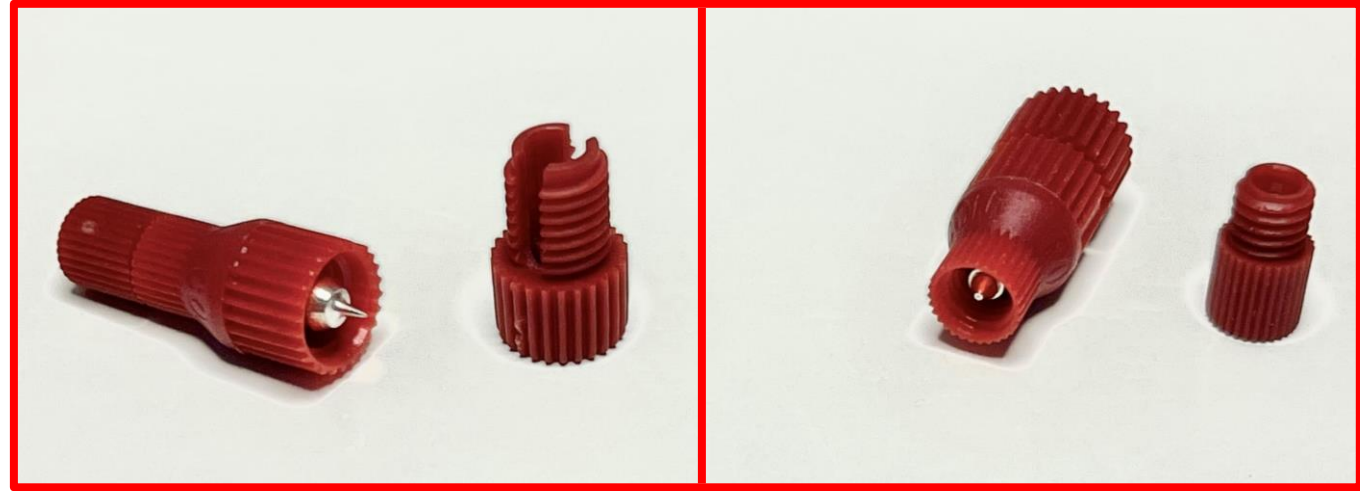


Posi-Tap Installation Guide for connecting to car 20-22 gage wires

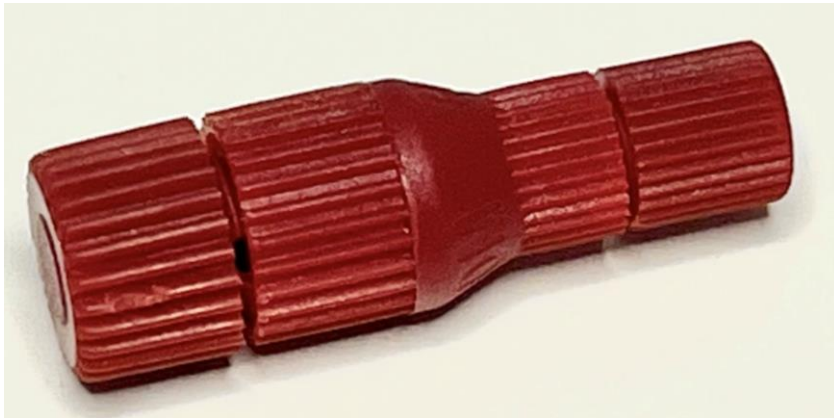

Please place extra attention to tapping/connecting Auto-Blip harness wires to car circuit wires. Most installation failures are due to poor connections. Please follow instructions to ensure a successful installation. Continuity test recommended. Perform calibration process once you complete installation, and before you attempt to use Auto-Blip.

Step 1 - Posi-tap endcap (grey) is for tapping into car circuit wires. Must be connected to car wire prior to connecting to Auto-Blip's harness.

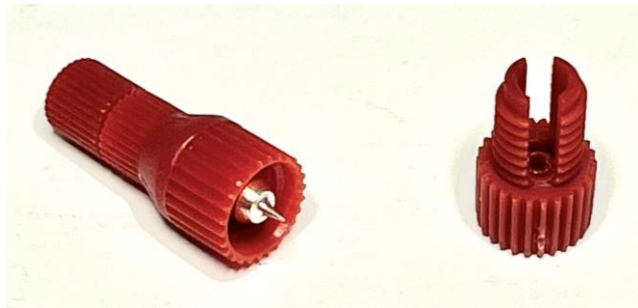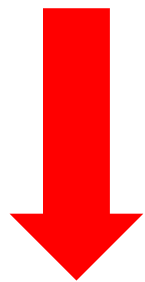

Attention! You must ensure needle on Step 1 pierces car wire vinyl through the center of the wire in order to make proper contact. Tap designed for 20-22 gage wire, thinner wire may fail. Continuity test recommended!

Step 1






Place Posi-tap endcap around car wire you are tapping into

Step 2



Firmly screw endcap into main barrel. Keep straight to ensure good contact.

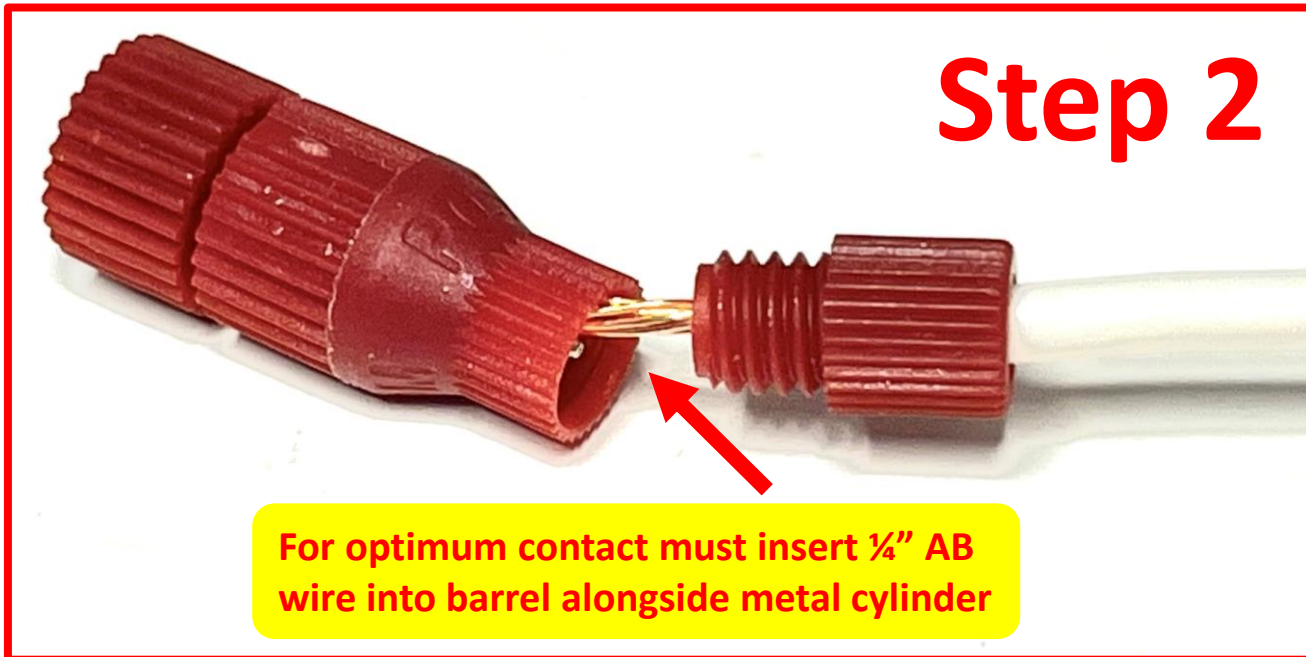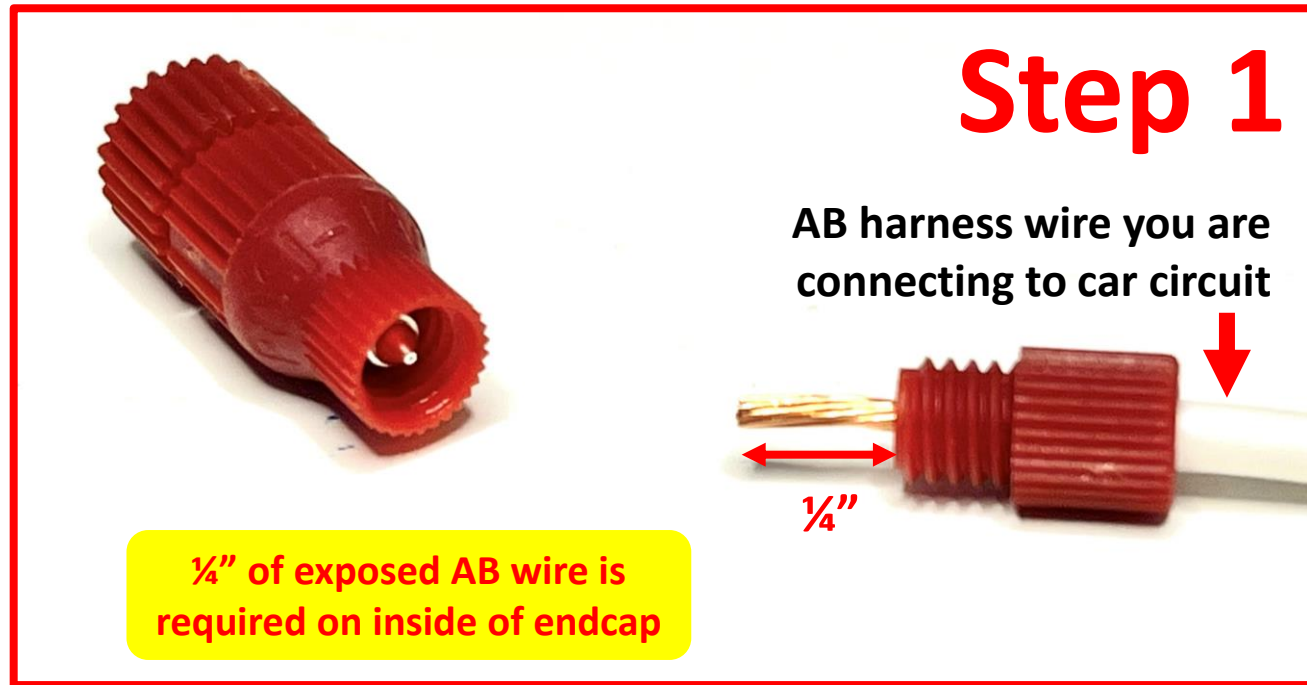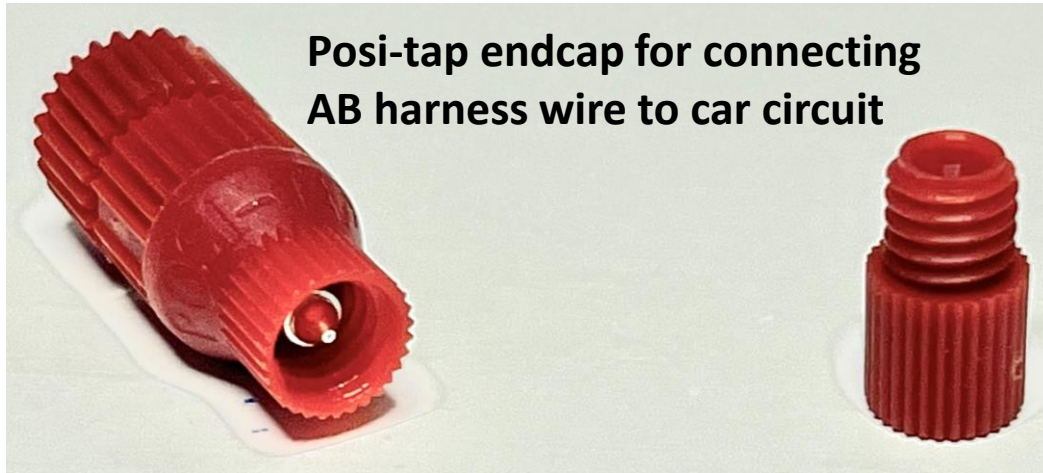

Installed Posi-Tap

