






AUTO-BLiP
INTELLIGENT DOWNSHIFTS

Posi-Tap Installation Guide for connecting to car's 20-22 gage wires

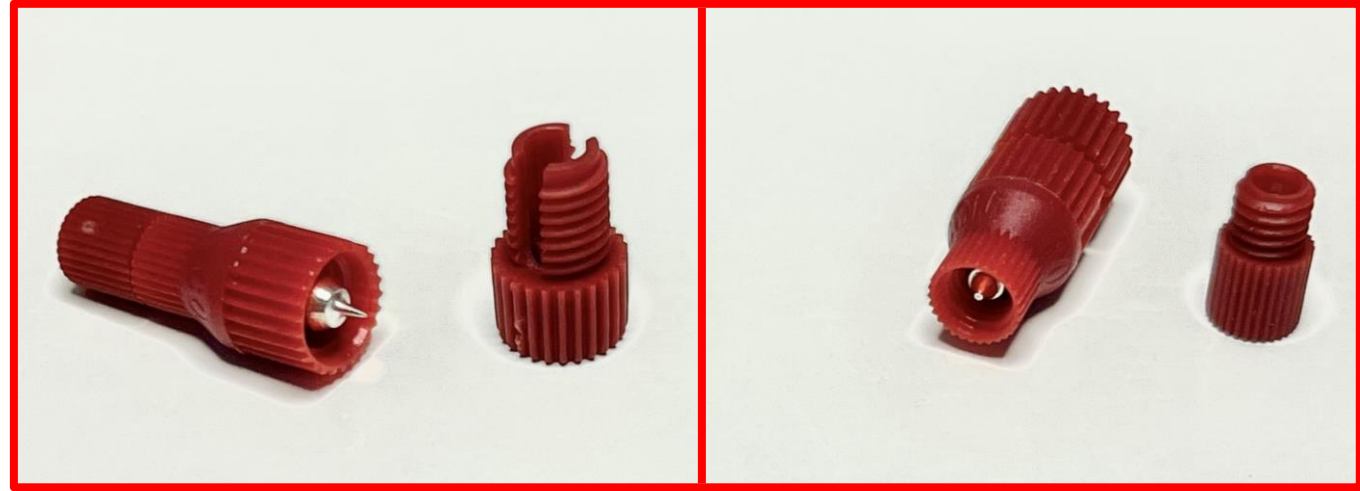


Please pay extra attention to tapping/connecting Auto-Blip harness wires to car's circuit wires. Most installation failures are due to poor connections. Please follow instructions to ensure a successful installation. Continuity test recommended. Perform calibration process once you complete installation, and before you attempt to use Auto-Blip.

Step 1 – The wider (larger) Posi-tap endcap is for tapping into car circuit wires. Must be connected to car wire prior to connecting to Auto-Blip's harness.

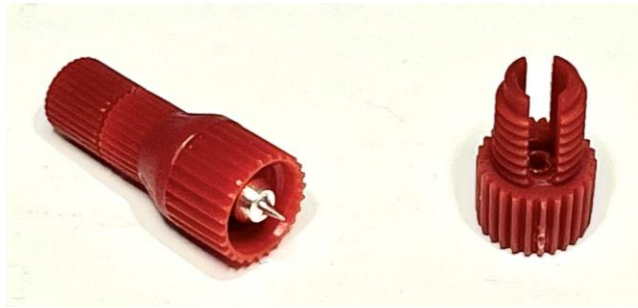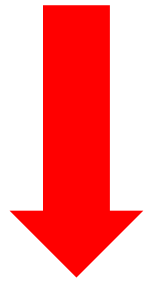




Attention! You must ensure needle on Step 1 pierces car wire vinyl through the center of the wire in order to make proper contact. Tap designed for 20-22 gage wire, thinner wire may fail. Continuity test recommended!

Step 1

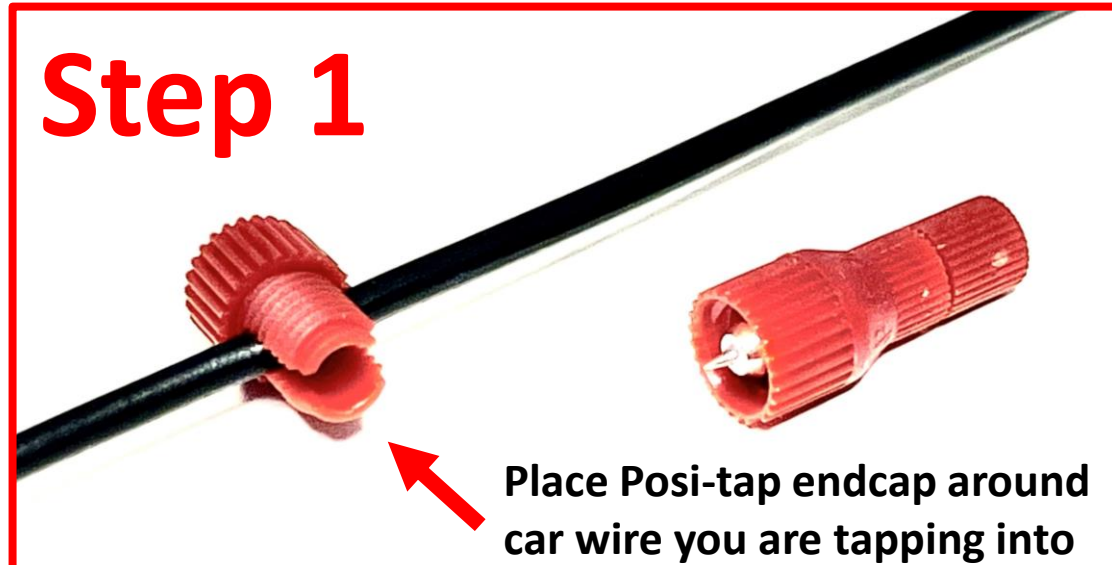


Step 2



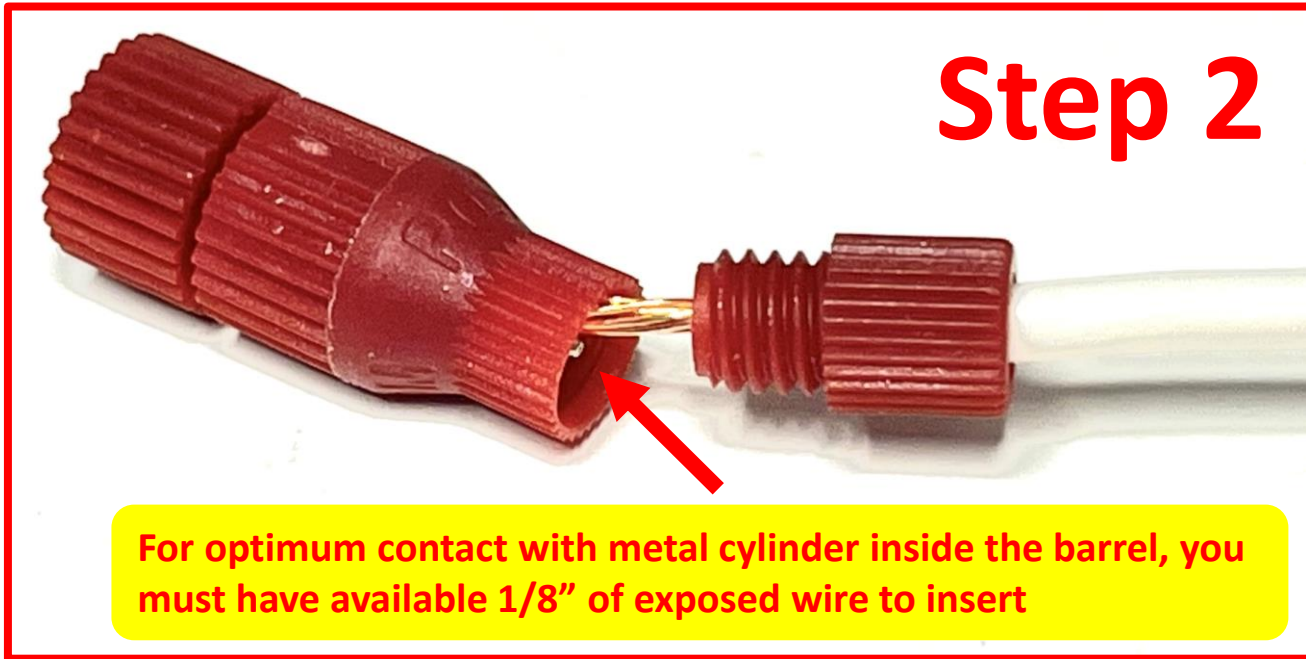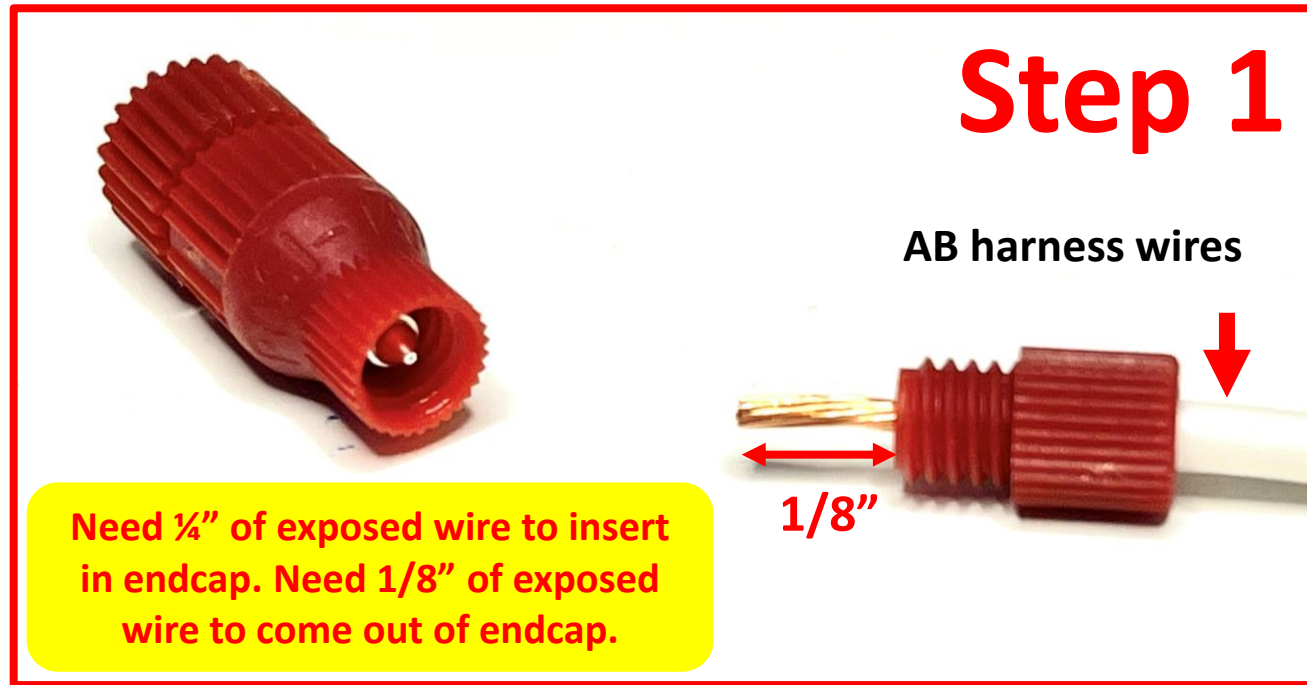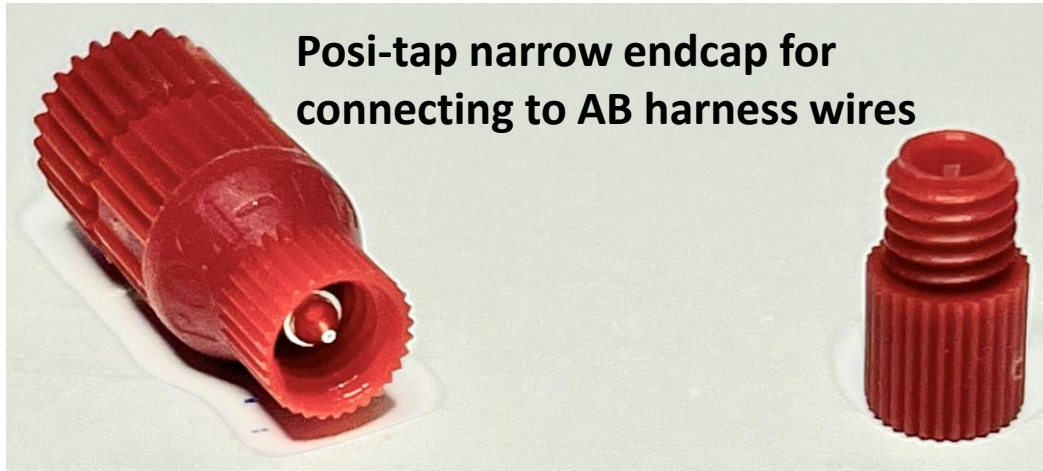

Properly Installed Posi-Tap

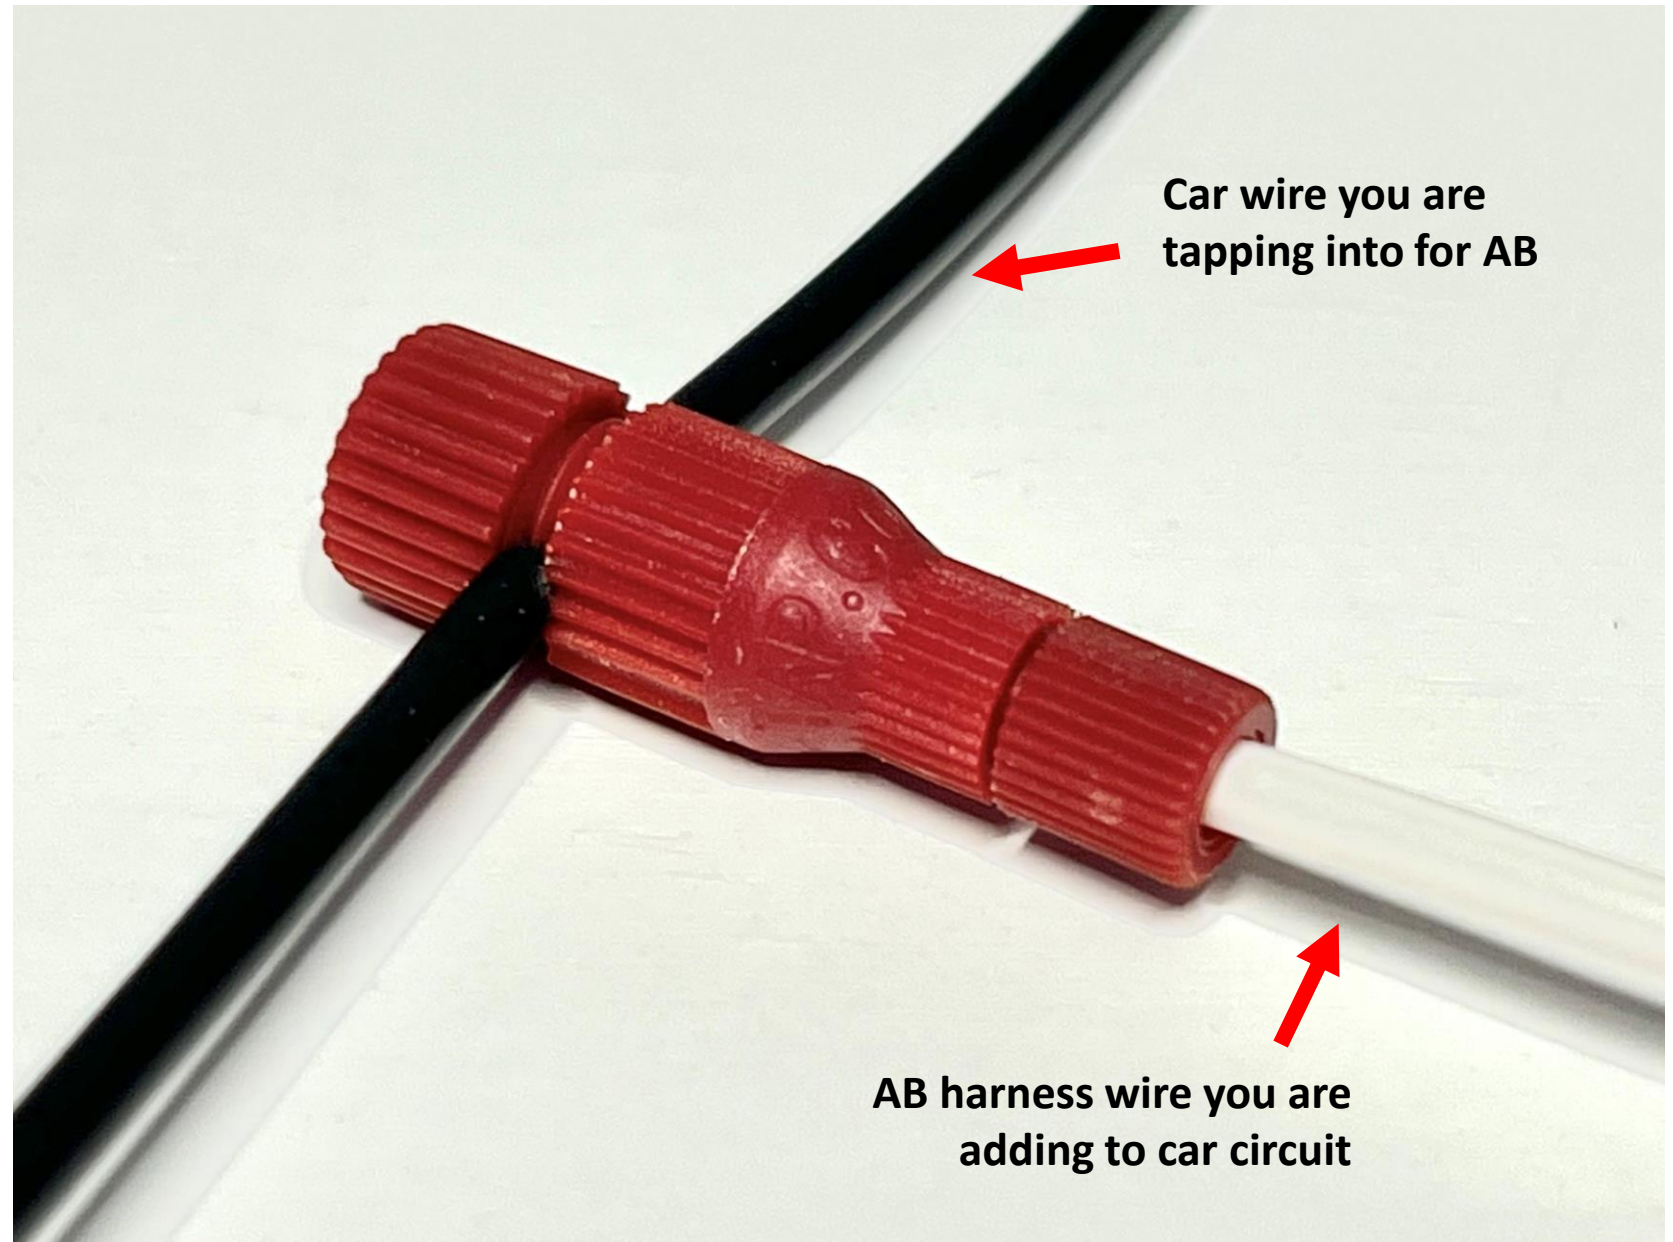

Careful - Wrong installation

Attention! If caps screw in crooked, the needle inside the barrel will fail to make proper contact with the wire

